



STI Solar is one of the world's leading manufacturers of solar products. Our range encompasses water gardening, garden lighting, hardware, home and security products. Designed in Germany, all STI Solar products feature top quality solar panels and circuit technology, designed and optimized to be the finest available anywhere.

If you require further assistance, please contact:

**PACIFIC**

STI Group div. of ZAB LP  
1203 Loyola Dr. Libertyville, IL 60048  
Tel: +1 847 918 8558 Fax: +1 847 918 8866  
E-mail: [sales@zablp.com](mailto:sales@zablp.com)

**AUSTRALIA & NEW ZEALAND**

Kelly Company Pty. Ltd.  
Tel: +61 2 9672 1588 Fax: +61 2 9672 1633  
E-mail: [sales@kellycompany.com.au](mailto:sales@kellycompany.com.au)

**EUROPE**

Sued-Solar GmbH  
Tel: +49 7141-6439719 Fax: +49 7141-6439720  
E-mail: [wutschik@sued-solar.de](mailto:wutschik@sued-solar.de)

**UK**

Convenience Marketing Ltd.  
Tel: +44 1926-858-333 Fax: +44 1926-851-707  
E-mail: [geoff@conveniencemarketing.co.uk](mailto:geoff@conveniencemarketing.co.uk)

**USA, Canada, Mexico, Central & South America**

STI Solar - STI Group div. of ZAB LP  
1203 Loyola Dr. Libertyville, IL 60048 USA  
Tel: +1 847 918 8558 Fax: +1 847 918 8866

E-mail: [sales@zablp.com](mailto:sales@zablp.com)

[www.zablp.com](http://www.zablp.com)



# SOLAR GLOBELIGHT

## Instruction Manua



## 10. FULL 2 YEAR WARRANTY

If within 24 months from the date of purchase this product fails due to a defect in material or workmanship, STI Solar will replace or repair it free of charge at its option.

**The warranty does not apply to:** Damage caused by accidents; abuse; poor handling; frost or normal wear and tear; products which have been subject to unauthorized repair; or modification or the batteries used in this product.

For further information, please contact your nearest service center detailed on the last page of this instruction manual.

**Solar Globelight:** Model Nos. 2000, 2010, 2020, 2030 & 2040

## CONTENTS

1. Introduction	page 3
2. Security Instructions	page 3
3. Overview	page 4
4. Components	page 4
5. Assembling and using your product	page 5
6. Cleaning and maintenance	page 5
7. Functionality Problems	page 6
8. Technical data	page 6
9. Spare Parts	page 6
10. Full 2 Year Warranty	page 7

**These instructions relate ONLY to the Solar Globelight and contain important information for using the product for the first time. Please keep these instructions for later reference. They should always accompany the product in the event of transfer to a new user.**

## 1. INTRODUCTION

Thank you for purchasing the Solar Globelight. You have purchased a product that complies with the latest and most up-to-date solar technology available.

This product complies with the European and National Standards. The relevant certificates of conformity are held by STI Group.

To preserve these standards and in order to maintain safety you should adhere to the instructions for use detailed in this manual.

## 2. SECURITY INSTRUCTIONS

In the event of any problems arising or damage occurring as a result of misuse the manufacturers warranty will be deemed cancelled. The manufacturer is not responsible for any claims or damages arising from the misuse of this product. For safety reasons and in order to maintain standards (CE) you are prohibited from altering or changing any component in the Solar Light.

**Please follow the instructions very carefully.**

For commercial applications due care and attention must be paid to the Health and Safety Standards in your jurisdiction.



**Float it**



**Stand it**

 


**Stake it**



### 3. OVERVIEW

The Solar Globelight has been designed for outdoor use. The solar module, hidden inside the Globelight, converts sunlight into electricity, which is then stored in the integral rechargeable battery pack. The light switches on automatically when it gets dark and turns itself off when it gets light or when the battery is fully discharged. The source of light comes from specialized LED (light emission diode), which provide high brightness but have very low power consumption. The light can be used in 3 different ways. Floating, sitting on the pedestal or on the stake. In order for the light to operate, the solar module needs to be placed in direct sunlight. The performance of the light e.g. the charging of the battery depends on the season.

### 4. COMPONENTS

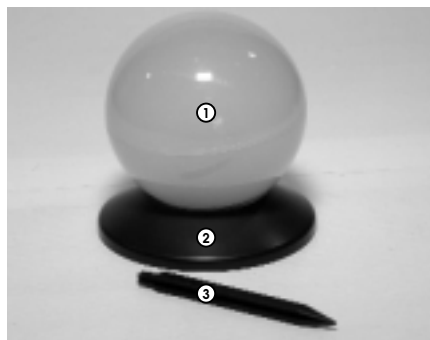

  - 1 Light Unit with inbuilt solar module, battery pack, LED  
2 Plastic pedestal  
3 Spike

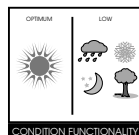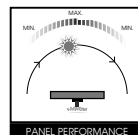

### 5. ASSEMBLING AND USING YOUR PRODUCT

#### Unpack all components carefully.

Open the bottom part of the globe and secure all batteries.

Slide the power button to the "ON" position.

Close the light in reverse order.

Decide on a suitable location.



Remove base to open



Check battery connection

### 6. CLEANING AND MAINTENANCE

**Removing / Replacing the batteries:** Use only original STI Solar batteries. Open the bottom part of the globe.

Remove old batteries and replace with new ones.

**Match the "+" and "-" markings to the battery.**

**Please note:** Used batteries must be disposed of carefully with regard to the environment and should NOT be put into the family waste.

## 7. FUNCTIONALITY PROBLEMS

### **Light does not switch on in darkness**

Check whether the switch is in the "ON" position. Another light source (streetlight) simulates daylight and prevents the light from switching on automatically. Position the light in a darker place.

### **Light does not switch on at all or just for a short time even though there had been full day sunshine.**

Battery is dead. Replace the rechargeable batteries.

## 8. TECHNICAL DATA

Operation Voltage:	1.2 V green, blue 2.4 V yellow, red, white
Solar module:	3.0 V green, blue 4.5 V yellow, red, white
Light source:	One Super Bright LED
Battery:	1.2 V 1200 mAh Ni-MH
Number of batteries:	(2) yellow, red, white (1) green, blue
Battery Operation capacity:	up to 24 hours

## 9. SPARE PARTS

**AA - NiMH Rechargeable Battery:** Item No. 2999

**Globelight Stake & Pedestal:** Item No. 2998