





## ECO-Series®

### Installation Instructions for Tempo Submersible Pond Filters



The Tempo filter is a heavy duty submersible filter that is great for water gardens up to 600 gallons total capacity. The filter provides mechanical and biological filtration.

Position your Tempo submersible filter in the deepest part of your pond, as far away from your waterfall as possible. We recommend using the Eco-Series universal waterfall diffuser or the Eco-Series waterfall spillways to help you create a beautiful, leak proof waterfall.

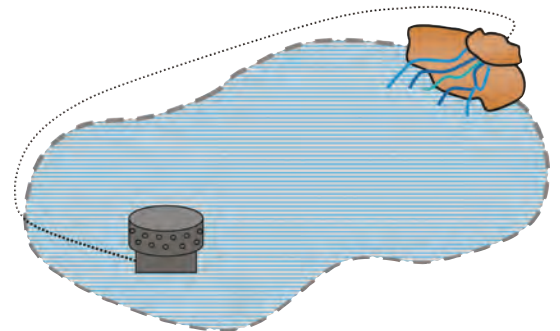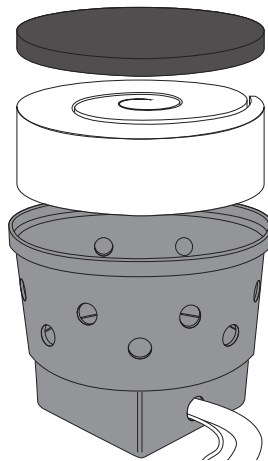

**Filters ponds up to 600 gallons!**

#### INSTALLING TEMPO FILTER



Place pump in bottom chamber of filter. We recommend EasyPro mag drive pumps up to 850 GPH.

Thread electrical cord through hole in base of filter. Always plug pumps into a GFI outlet.





Slide tubing through big hole in base of filter. Use 1/2" to 1" tubing.

Insert the white inner media.



Replace the black top pad.

Place filter in lowest part of pond, opposite the waterfall for best circulation.



## CLEANING TEMPO FILTER

1. Thoroughly rinse the top pad once a week or as needed depending on pond conditions.
2. Unroll and clean the inner pad monthly. Size of pond, fish load and other factors will determine exactly how often you will need to clean the filter.

Replacement Pads Available: WF6TP - top pad, WF6BP - bottom inner pad

### EasyPro Pond Products Limited Warranty

EasyPro Pond Products ("EasyPro") warrants to the purchaser that this product ("Product") will be free from any mechanical or material defects for a period of **five years** from the date of purchase. Filter media is considered a wearable item and is not covered under this limited warranty. This warranty only covers properly installed and maintained Products sold by authorized EasyPro Sellers who are subject to and follow EasyPro's quality control standards. Please note that because EasyPro is unable to control the quality of Products sold by unauthorized sellers, unless otherwise prohibited by law, this warranty does not cover Products purchased from unauthorized sellers.

This warranty does not cover normal wear and tear, nor any deterioration suffered through overloading, improper use, negligence, improper installation, acts of God or accident. Similarly, any modification made by the purchaser to the Product will cause the warranty to be null and void. This warranty does not cover any cost associated with the installation or removal of the Product subject to a warranty claim.

All returned items will be inspected to determine cause of failure before a warranty claim is approved. The exclusive remedies provided hereunder shall, upon EasyPro's inspection and option, be either repair or replacement of the Product or parts covered under this warranty.

**Making a Claim:** A Return Authorization ("RA") number must first be obtained by calling EasyPro at 800-448-3873 or via email at [warranty@easypro.com](mailto:warranty@easypro.com). It is the purchaser's responsibility to pay the return shipping charges. Be sure to include the RA number, original receipt (in the form of an invoice or sales receipt), your name, your return address and your phone number inside of the package. No warranty claims will be honored without the original receipt that shows that your purchase was made from an Authorized EasyPro Seller. Ensure the product is properly packaged and insured for the replacement value. Damage due to improper packaging is the responsibility of the sender.

ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY LIMITED IN DURATION TO THE DURATION OF THE WARRANTY AS DESCRIBED ABOVE. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

EasyPro shall not be held liable for any damages caused by defective components or materials of this Product; or for loss incurred because of the interruption of service; or any consequential/incidental damages and expenses arising from the production, sale, use or misuse of this Product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

EasyPro shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this Product. This warranty gives you specific legal rights, and you may also have other rights that vary from State to State.