



(Item #29500)

Plumbing Assembly for MicroSkim®/Skimmer SK302P or MicroPondless®

Installation Instructions

PACKAGE INCLUDES:


- (3) SS hose clamps (1-1/16"-2") (Item #99993)
- (1) 1-1/4" threaded union (Item #99225)

- (1) Kink-free pipe (16") (Item #98099)
- (1) 1-1/2" x 1-1/2" barbed male hose adapter (Item #99158)

- (2) 1-1/4" x 1-1/2" barbed male hose adapter (Item #99157)

- (1) 1-1/4" x 1-1/2" pvc male pipe adapter (Item #99142)


- 1) Connect 1" x 1-1/2" reducer bushing (included with AquaSurge™ Pump) to pump.
- 2) Screw 1-1/2" x 1-1/2" barbed male hose adapter to reducer bushing.
- 3) Connect 16" piece of kink-free pipe to hose adapter. Slide hose clamp over connection and tighten clamp.
- 4) Place second hose clamp over pipe and connect 1-1/2" x 1-1/4" barbed male hose adapter and tighten clamp.
- 5) Attach 1-1/4" threaded union to end of pipe.
- 6) If using kink-free pipe, connect 1-1/4" x 1-1/2" barbed male hose adapter to end of union. If using flex pvc pipe, connect 1-1/4" x 1-1/2" male pipe adapter.

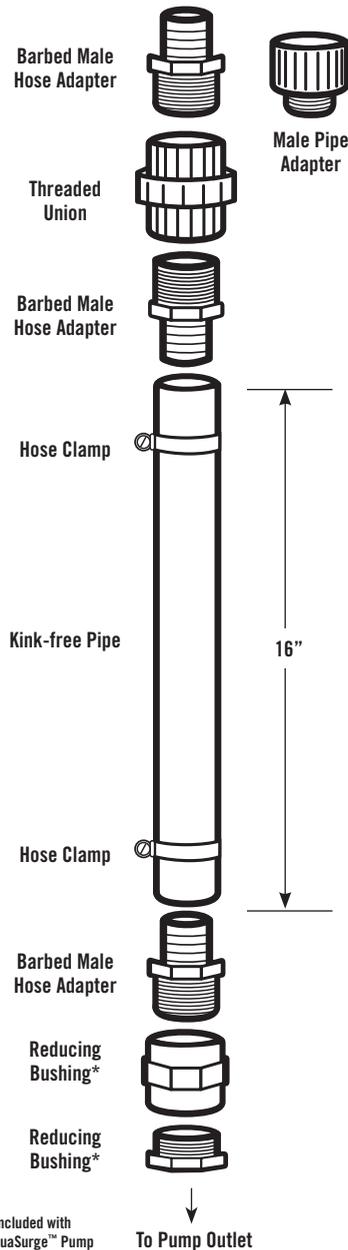

NOTE: You can either use the male pipe adapter (flex PVC) OR the 1 1/4" x 1 1/2" barbed male hose adapter (kink free) that threads into the union.

NOTE: If the pump is turned off during a heavy freeze, be sure to remove the plumbing assembly so the water drains from the pipe and biological filter. This will prevent the check valve and plumbing from being damaged due to freeze/thaw.

Plumbing assembly inside skimmer

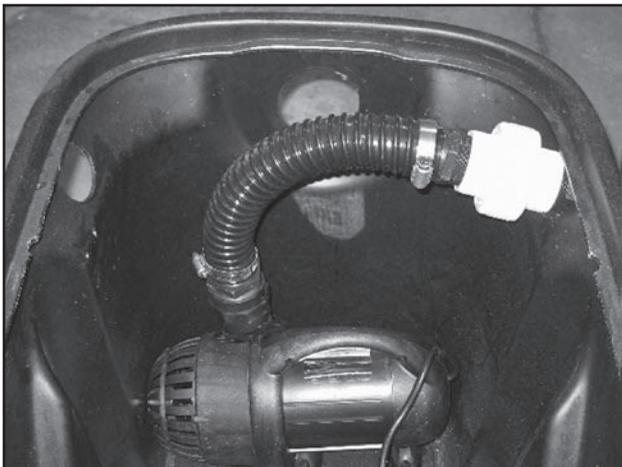

*Included with AquaSurge™ Pump

To Pump Outlet



Made in U.S.A. for
AquaScape, Inc.
St. Charles, IL 60174 • Brampton, ON L6T 5V7
www.aquascapeinc.com