

WFS37 • WFS50



**WFS37 & WFS50
Water Fill Kits
Instruction Manual**



**INSTALLATION INSTRUCTIONS
FOR USE IN A SKIMMER**

These WFS37 and WFS50 installation instructions are written for installation in an EasyPro brand skimmer. These autofills will work with other brands of skimmers however the installation instructions could differ.



WFS37 — Install the autofill in the back wall of the skimmer by drilling a $\frac{3}{4}$ " hole 3" down from the top of the skimmer. The autofill is usually located in the back wall of the skimmer in the pump chamber (see photo).

Wrap the threads of the autofill body with Teflon tape then insert the autofill through the hole you just drilled. From the outside, thread the PVC reducer bushing onto the threads of the autofill. Tighten the bushing up against the skimmer wall. This mounts the autofill to the skimmer. Wrap Teflon tape over the bushing threads. If you are using this autofill with your irrigation system connect the grey female threaded fitting (included) to the PVC fitting. Tighten but do not overtighten. $\frac{1}{2}$ " irrigation pipe will fit over the barbed fitting. Use a hose clamp to secure tubing to fitting. The grey male adapter is included for use in a Water Fill Box and is not used if installed in a skimmer.

WFS50 — A bulkhead fitting is used to install this larger auto fill valve. To install, drill a $1\frac{5}{8}$ " hole in the back wall of the skimmer centered 3" down from the top lip of the skimmer. Install the bulkhead fitting through the skimmer wall and tighten. Wrap the threads on the autofill and install into the bulkhead inside the skimmer. If connecting to $\frac{1}{2}$ " irrigation line, use the grey poly fitting (included) and install on the outside of the skimmer into the bulkhead fitting.

Wrap the threads with Teflon first! If you are connecting to a garden hose you will need to install a $\frac{1}{2}$ " nipple and a FPT x garden hose adapter (available at a hardware store) into the outside of the bulkhead.

The recommended pressure of your incoming water system is 25-40 PSI. At high pressure the autofill will not shut off completely. You can reduce high pressure by installing an inline pressure regulator before your waterline connects to the auto fill. This will allow you to control the water pressure if it is too high.

INSTALLATION INSTRUCTIONS FOR WATER FILL BOXES


The water fill box is a convenient location to mount your auto fill valve. Installing an auto fill inside a skimmer or in a pondless waterfall vault can be difficult depending on the size of pump being used and the size of the auto fill valve. The auto fill box lets you mount your auto fill anywhere around the perimeter of the pond or pondless reservoir.

WFS37 — The auto fill box comes with a pre-installed 1/2" bulkhead fitting in the end that the auto fill mounts to. You will need to install the PVC bushing into the bulkhead fitting and then install the auto fill into the bushing. Use Teflon tape on all threads.

Use the grey male adapter on the outside of the fill box. Wrap the threads in Teflon tape and tighten into the bulkhead fitting on the outside. Connect the 1/2" irrigation line to the fitting and clamp.

WFS50 — Wrap the threads of the auto fill with Teflon and thread into the bulkhead fitting inside the water fill box. Install the grey male adapter on the outside using Teflon tape. Connect the 1/2" irrigation line to the fitting and clamp.

The shut off level of the auto fill can be changed by adjusting the float arm up or down as needed. If the auto fill does not shut off completely the incoming water pressure may be too high. See instructions on previous page to reduce pressure.

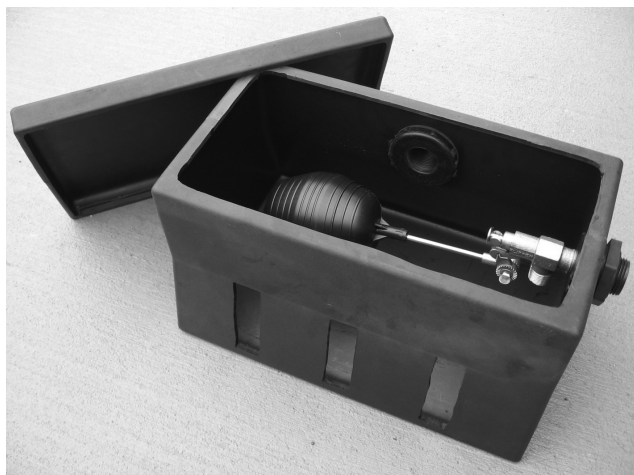

EasyPro Pond Products Limited Warranty

EasyPro Pond Products ("EasyPro") warrants to the purchaser that this product ("Product") will be free from any mechanical or material defects for a period of **one year** from the date of purchase. This warranty only covers properly installed and maintained Products sold by authorized EasyPro Sellers who are subject to and follow EasyPro's quality control standards. Please note that because EasyPro is unable to control the quality of Products sold by unauthorized sellers, unless otherwise prohibited by law, this warranty does not cover Products purchased from unauthorized sellers.

This warranty does not cover normal wear and tear, nor any deterioration suffered through overloading, improper use, negligence, improper installation, acts of God or accident. Similarly, any modification made by the purchaser to the Product will cause the warranty to be null and void. This warranty does not cover any cost associated with the installation or removal of the Product subject to a warranty claim.

All returned items will be inspected to determine cause of failure before a warranty claim is approved. The exclusive remedies provided hereunder shall, upon EasyPro's inspection and option, be either repair or replacement of the Product or parts covered under this warranty.

Making a Claim: A Return Authorization ("RA") number must first be obtained by calling EasyPro at 800-448-3873 or via email at warranty@easypro.com. It is the purchaser's responsibility to pay the return shipping charges. Be sure to include the RA number, original receipt (in the form of an invoice or sales receipt), your name, your return address and your phone number inside of the package. No warranty claims will be honored without the original receipt that shows that your purchase was made from an Authorized EasyPro Seller. Ensure the product is properly packaged and insured for the replacement value. Damage due to improper packaging is the responsibility of the sender.

ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY LIMITED IN DURATION TO THE DURATION OF THE WARRANTY AS DESCRIBED ABOVE. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

EasyPro shall not be held liable for any damages caused by defective components or materials of this Product; or for loss incurred because of the interruption of service; or any consequential/incidental damages and expenses arising from the production, sale, use or misuse of this Product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

EasyPro shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this Product. This warranty gives you specific legal rights, and you may also have other rights that vary from State to State.



800-448-3873 • Grant, Michigan
www.easypro.com